


Rectangular Ducts

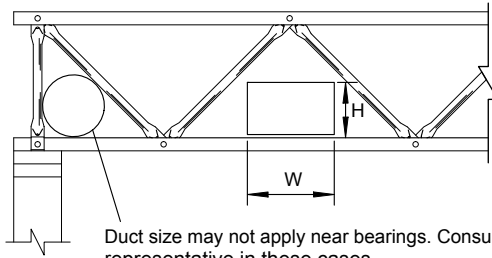

How to read these tables:

"H" dimensions are in the column heads
 "W" dimensions are in the body of the tables

Example:
 For a 24" RED-L™ truss, possible sizes are 4" x 21", 6" x 18",
 8" x 16", and 10" x 13"

RED-L™ and RED-W™ Trusses

Truss Depth	H			
	4"	6"	8"	10"
14"	15"	10"	5"	
16"	17"	13"	8"	4"
18"	19"	15"	11"	7"
20"	20"	16"	13"	10"
22"	20"	17"	14"	11"
24"	21"	18"	16"	13"
26"	21"	19"	17"	14"
28"	22"	20"	17"	15"
30"	22"	20"	18"	16"
32"	23"	21"	19"	17"
34"	23"	21"	19"	17"
36"	23"	21"	20"	18"
38"	23"	22"	20"	18"
40"	23"	22"	20"	19"
42"	24"	22"	21"	19"
44"	24"	22"	21"	20"
46"	24"	23"	21"	20"

RED-S™ Trusses

Truss Depth	H			
	4"	6"	8"	16"
16"	25"	20"	14"	9"
18"	27"	22"	17"	12"
20"	28"	24"	19"	15"
22"	29"	25"	21"	17"
24"	30"	26"	23"	19"
26"	30"	27"	24"	21"
28"	31"	28"	25"	22"
30"	31"	29"	26"	23"
32"	32"	29"	27"	24"
34"	32"	30"	27"	25"
36"	32"	30"	28"	26"
38"	33"	30"	28"	26"
40"	33"	31"	29"	27"
42"	33"	31"	29"	27"
44"	33"	31"	30"	28"
46"	33"	32"	30"	28"
48"	34"	32"	30"	29"

RED-M™ Trusses

Truss Depth	H			
	4"	6"	8"	10"
20"	25"	21"	16"	12"
22"	26"	22"	18"	14"
24"	4"	6"	8"	16"
26"	28"	24"	21"	18"
28"	28"	25"	22"	19"
30"	29"	26"	23"	20"
32"	29"	26"	24"	21"
34"	29"	27"	25"	22"
36"	30"	27"	25"	23"
38"	30"	28"	26"	24"
40"	30"	28"	26"	24"
42"	30"	29"	27"	25"
44"	31"	29"	27"	25"
46"	31"	29"	27"	26"
48"	31"	29"	28"	26"
50"	31"	30"	28"	26"
52"	31"	30"	28"	27"

RED-H™ Trusses

Truss Depth	H			
	4"	6"	8"	10"
24"	34"	29"	24"	19"
27"	36"	31"	27"	22"
30"	37"	33"	29"	25"
33"	38"	34"	31"	28"
36"	39"	36"	32"	29"
39"	39"	36"	34"	31"
42"	40"	37"	35"	32"
45"	40"	38"	35"	33"
48"	41"	38"	36"	34"
51"	41"	39"	37"	35"
54"	41"	39"	37"	35"
57"	42"	40"	38"	36"
60"	42"	40"	38"	37"
63"	42"	40"	39"	37"
66"	42"	41"	39"	37"
69"	42"	41"	39"	38"
72"	42"	41"	40"	38"

These tables are based on heaviest loads (shortest panels). Check with your RedBuilt representative for more precise sizing.